


INSTALLATION GUIDE

SKYLITE

WARNING: DO NOT WALK DIRECTLY ON THE SHEET

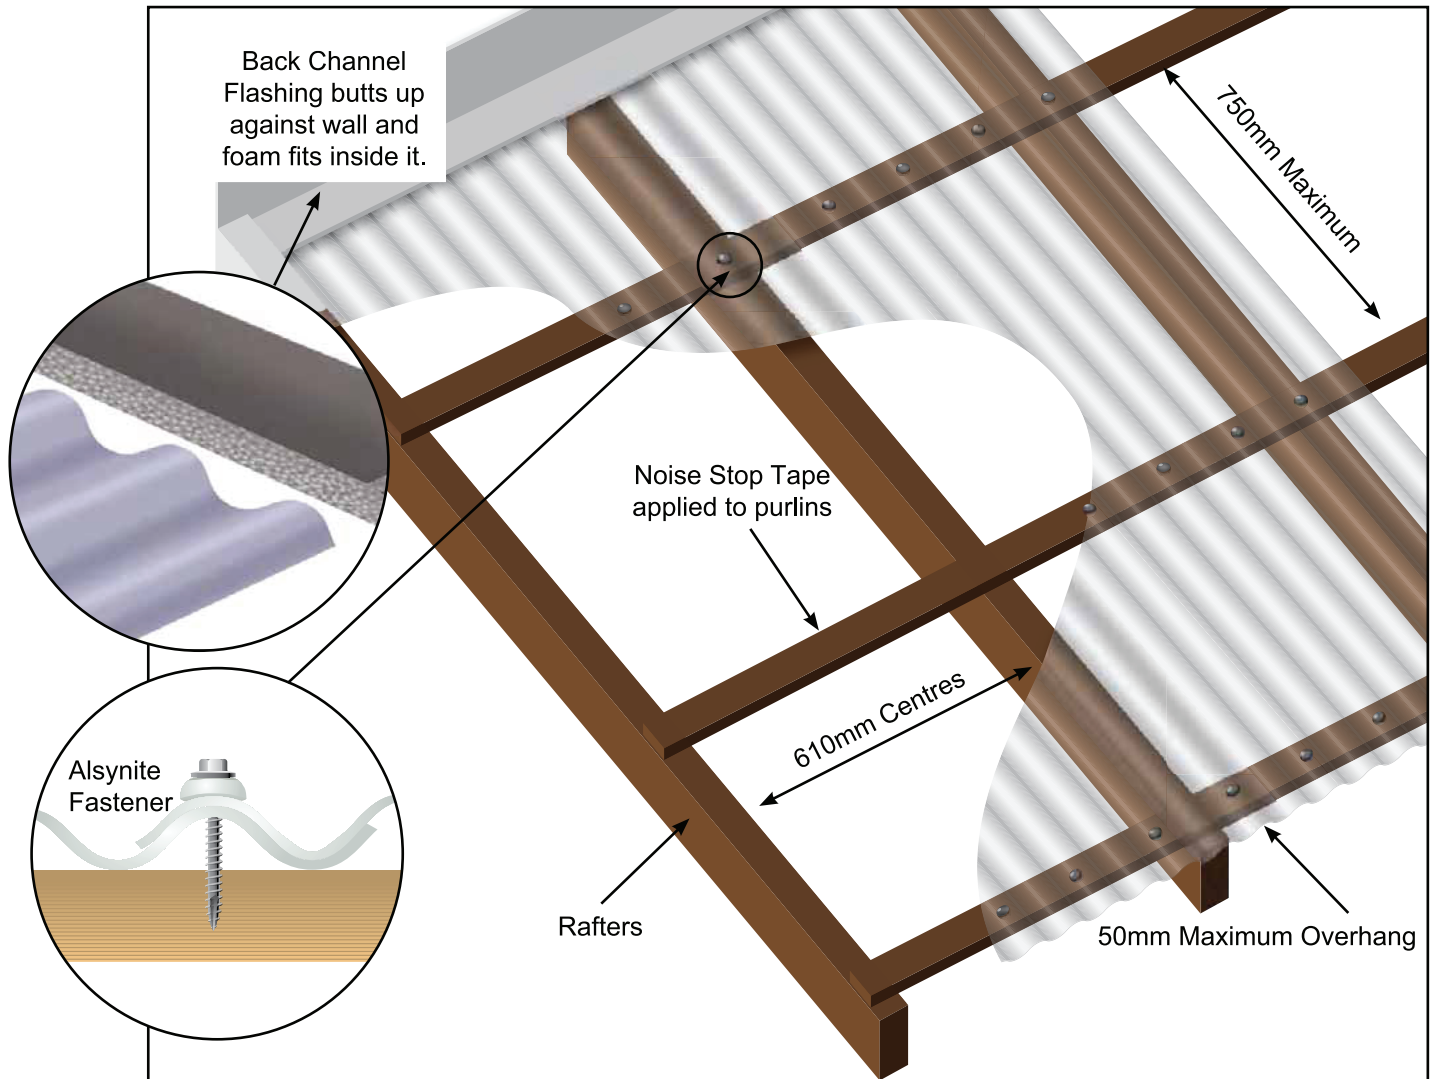

- The roof should have a minimum pitch of 5°
- Purlins should be no further than 750mm apart (closer in high wind zones)
- Select the sheet length from the standard lengths available
- Use the *Sheet Coverage table* to calculate the number of sheets required
- Ensure appropriate tools are used to install the sheeting
- Roof sheeting must be fixed with Alsynite 12g x 55mm fasteners
- When used as cladding or fencing use Alsynite TImbertite 12g x 25mm fasteners
- Ensure lapping edge faces away from the prevailing wind
- Do not walk directly on the sheets. If access is required, use walking planks.
- Fix at every third corrugation mid span and every second at the ridge and gutter.

The diagram above is an artists impression only and must not be relied upon as an installation instruction. NOT TO SCALE.

Head Office
7 De Leeuw Place
Te Rapa Park
Hamilton 3200
Ph: 07 850 5088
Fax: 07 850 5003

Palmerston North Branch
74 Malden Street
Roslyn
Palmerston North 4414
Ph: 06 356 5384
Fax: 06 356 5387

Christchurch Branch
18 Nga Mahi Road
Sockburn
Christchurch 8042
Ph: 03 348 3375
Fax: 03 348 3376

**Invercargill
Distribution Centre**
140 Mersey Street
Invercargill 9810

ALSYNITE®
0800 257 964 | sales@alsynite.co.nz
www.alsynite.co.nz