


- Place profiled foam supports on each purlin – a small amount of silicon can be used to hold these in place if required. These will also act as Narrow Tip closure E Fillers.
- Run Lap-Seal tape the full length on top of the two iron panel ribs that the fibreglass top sheet will overlap (see diagram below).
- Lay the top sheet of the system down, making sure the ends of the top and bottom sheets are even. Mark ribs of the translucent sheeting and drill oversize fixing holes if required.
- Fix with profile washers and EPDMs on every rib and every purlin.
- Fit Wide Tip profile foam between top sheet and ridge flashing.

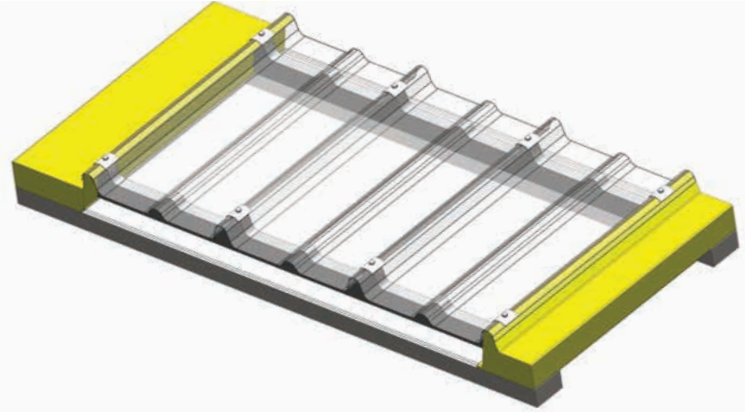

Alsynite Triple Skin Thermal Roofing System

– Exploded Panel

